


14 Sonata Display Appearance

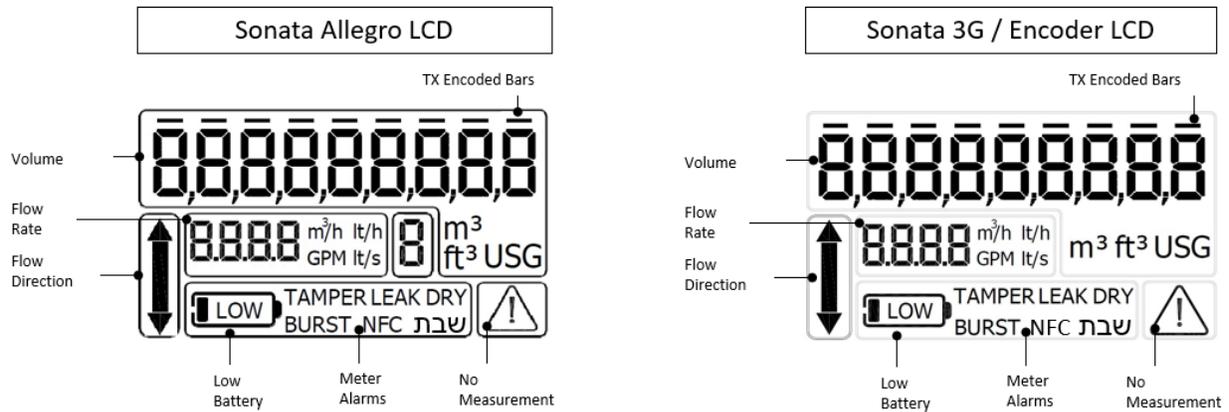

15 Display Icons

The Sonata is provided with a 9-digit volume digital display factory programmed to your specifications. The LCD also has a 4-digit rate of flow indicator. At the time of order, you can select

- **Volume units:** US Gallons, Cubic Feet, or Cubic Meters.
- **Rate of Flow units:** US Gallons per Minute (GPM), Cubic Meters per Hour (M³/h), or Liters per Second (It/s). When US Gallons or Cubic Feet are selected for the Volume Consumption units, the Rate of Flow will be GPM.
- **Alarms:** Low Battery, Tamper, Leak, Dry Pipe, Burst Pipe, or Measurement Failure (as indicated by the triangle with the exclamation point on the lower right side of the LCD).
- **Notifications:** The NFC icon on the LCD will be illuminated when connected with an NFC programming cable. Shabbat/Sabbath mode, as indicated by Hebrew letters, is not supported in the North American Market.
- **Flow Direction** is represented by a bi-directional arrow. When no flow is being used, the two arrows will disappear, leaving a solid black bar as indicated in the image shown. When flow is being used, one of the two triangles will also darken creating what appears to be an arrow pointing in the direction flow is passing.
- **Network Status icon** (only available on the Sonata Allegro LCD) is located in the box to the right of the Rate of Flow and is represented by a seven-segment character. See the table below for an explanation of the symbols that may appear in this box.
- **Checksum:** When there is no flow through the meter, every 60 seconds the last four digits of the software checksum will display in the Flow Rate field for a duration of two seconds. Checksum is not displayed if the meter is registering flow.